




INSTRUCTION SUMMARY

BIA-C1509-160 HOME BOOSTER PUMP

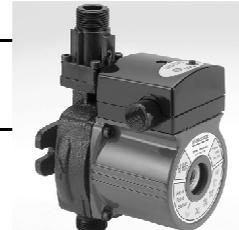

1. MAXIMUM WATER TEMPERATURE 60 DEGREES C

Install the pump AFTER the tempering valve. Take particular care in systems heated by a wet-back fire

2. MAXIMUM PARTICAL SIZE 1.8mm


We strongly recommend you fit an inlet strainer. Particles can block the impellor/volute and/or the flow switch

3. ENSURE THE BOOSTER IS MOUNTED LEVEL IN ALL 3 AXIS

4. NEVER ALLOW THE BOOSTER TO RUN WHILE DRY

5. ENSURE THE BOOSTER HAS ITS OWN POWER SUPPLY

Sharing an existing power outlets can cause low voltage at motor causing blown fuses, tripping of motor, overload or burned out motor

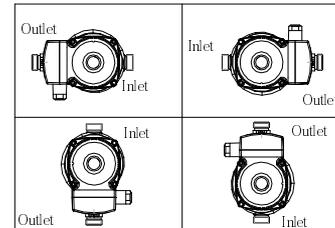

Keep the Pump Shaft Parallel to Sea Level



Level Meter